

Telephone:
Fax:
VAT Registration No.:


2 & 3	11 V min.

- Ensure ignition switched OFF.
- Disconnect MAF sensor multi-plug.
- Switch ignition ON.
- Check voltage between harness multi-plug terminals.
- If voltage not as specified: Check wiring and relays.

1 & 2	Engine idling	1,2 V approx.
1 & 2	3000 rpm	1,7 V approx.

- Ensure engine is at normal operating temperature.
- Ensure ignition switched OFF.
- Do not disconnect multi-plug. Access MAF sensor multi-plug terminals.
- Start engine. Allow to idle.
- Check voltage between multi-plug terminals.
- Increase rpm to specified value.
- Check voltage between multi-plug terminals.

12

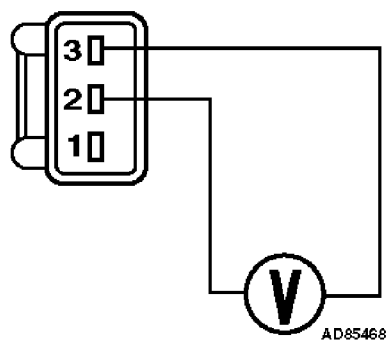

13

